


A C C U R A C Y F R O M T H E U . S .

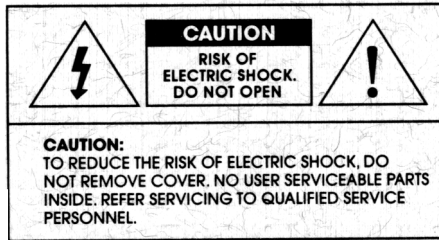


THIS APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS

For any additional information on your Acurus 200FIVE Amplifier, please contact your local dealer or Mondial Designs Ltd. Acurus Audio is manufactured by Mondial Designs Ltd. Made in the U.S.A.

MONDIAL DESIGNS LIMITED
20 Livingstone Avenue, Dobbs Ferry, NY 10522-3400
(914) 693-8008 • Fax (914) 693-7199 • www.mondialdesigns.com

acurus
BY MONDIAL

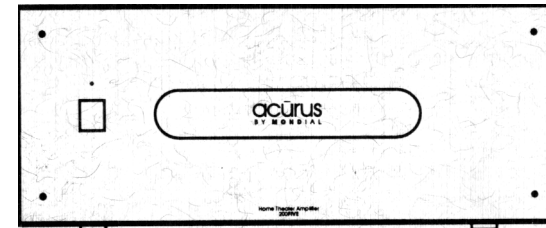

200FIVE
Home Theater Amplifier

Owner's
Information

Congratulations on your purchase of the Acurus 200FIVE Home Theater Power Amplifier. As the originator of the three channel amplifier, we have created the 200FIVE to give you the benefit of separate two and three channel amplifiers in a single chassis. Please read this brief owners manual. Upon completion you will understand the set-up and operation of your 200FIVE.

1. Although all Acurus components are burnt-in prior to delivery, it has been our experience that the amplifiers continue to improve during the first 250 hours of use.
2. Allow adequate ventilation on all sides of the Acurus amplifiers. Never place directly on carpeted floor.
3. NEVER attach or remove speaker cables or input cables with the amplifier on.
4. Remove power cord from wall outlet when changing fuses.
5. Be very careful with the placement of all your systems wiring. Many times placement of wiring will alter the amount of background noise or hum that is audible.

CONNECTIONS

INPUT—Connect your preamplifier or processor's line level outputs to the appropriate input jacks on the rear panel. The 200FIVE is designed with five independent channels. Be certain to connect the right front and left front outputs to the specific inputs located on the rear panel. This will afford you the optimum stereo as well as home theater operation.

OUTPUT—Attach the amplifier speaker outputs to the appropriate input connectors on your loudspeakers. Caution should be taken that the + (red) and - (black) speaker cable connectors are not touching each other, both behind the amplifier and behind the loudspeakers.

AC POWER—Connect the amplifier directly to your A.C. wall outlet. The Acurus 200FIVE is capable of delivering tremendous power to your speakers, but not if its ability to receive AC current is restricted in any way. We suggest you do not use an extension cord however, if you must use an extension cord 14 gauge wiring is a minimum.

SPECIFICATIONS

Rated Power
200 watts per channel continuous,
each channel driven into 8 ohms
20 Hz to 20,000 Hz at no more than
0.06% THD

250 watts per channel continuous,
each channel driven into 4 ohms
20 Hz to 20,000 Hz

Input Impedance
20K ohms

Input Sensitivity
1.8 volts for full output

Signal to Noise Ratio:
110dB A Weighted

Dimensions:
17" x 6 3/4" x 14"

Weight:
47 lbs.

acurus
BY MONDIAL

Owner's
Information